

FACT FILE 003



ROOM THERMOSTAT FOR LATEST RADIANT

ROOM THERMOSTATS FOR RADIANT BOILERS MUST BE OF THE LOW VOLTAGE TYPE WITH NON VOLTAGE CONTACTS THIS MEANS JUST TWO WIRE CONNECTIONS (NO SERIES HEATER)

WE DO NOT RECOMMEND ANY PARTICULAR MAKE OF ROOM THERMOSTAT ONLY THAT IT MUST BE LOW VOLTAGE WITH NON VOLTAGE CONTACTS

TO WIRE UP THE ROOM STAT PROCEED AS FOLLOWS:

1. REMOVE ORANGE/YELLOW WIRE FROM TA AND CONNECT TO CENTRE SPARE TERMINAL
2. CONNECT WIRE FROM 1 ON ROOMSTAT TO CENTRE SPARE TERMINAL
3. CONNECT WIRE FROM 3 ON ROOMSTAT TO TA

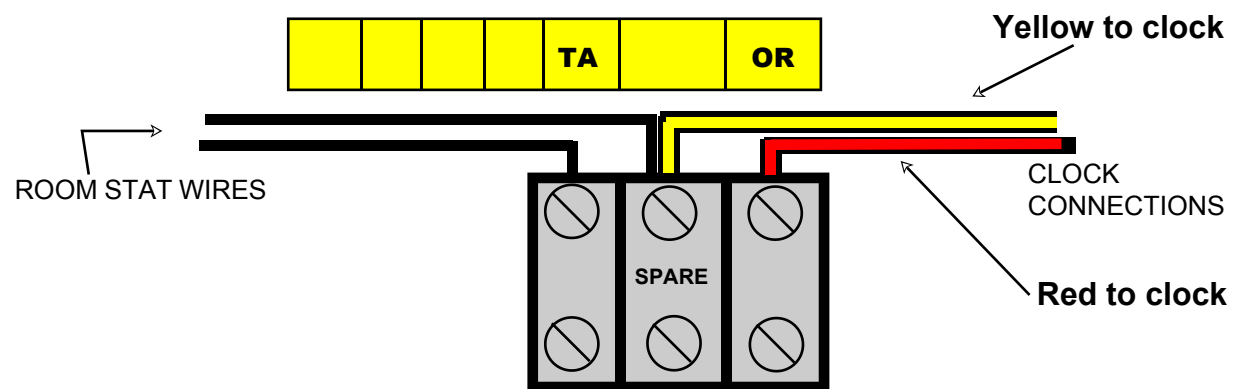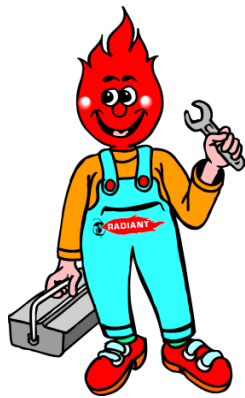

Radiant Technical Help - Line (UK) 01329 - 828555