


FACT FILE 019

RADIANT RSF 20/24 for use as SYSTEM BOILER

The following instructions are for the safe installation and temporary use of Combination gas boiler used as system boiler (Domestic hot water not connected)

1. Hang and connect boiler to Heating Flow & Return pipes
2. Install and connect flue (In accordance with installation instructions)
3. Ensure Domestic hot water inlet connection is left open (Do not plug)
4. Ensure Domestic hot water outlet connection is left open (Do not plug)
5. Connect Gas supply to boiler (CORGI registered installers only)
6. Insert 22mm x 15mm tee into Heating return pipe
7. Connect electrical supply to boiler (via, 3amp fused Spur box or Socket)
8. Connect mains water supply pipe to below boiler, this complete with isolating valve.
9. Install filling loop connection from mains water supply to tee in Heating return pipe
10. Ensure you have fitted a drain off valve at lowest point in heating system
11. Fill system and test for leaks
12. Turn Summer / Winter switch to winter (heating mode "snowflake")

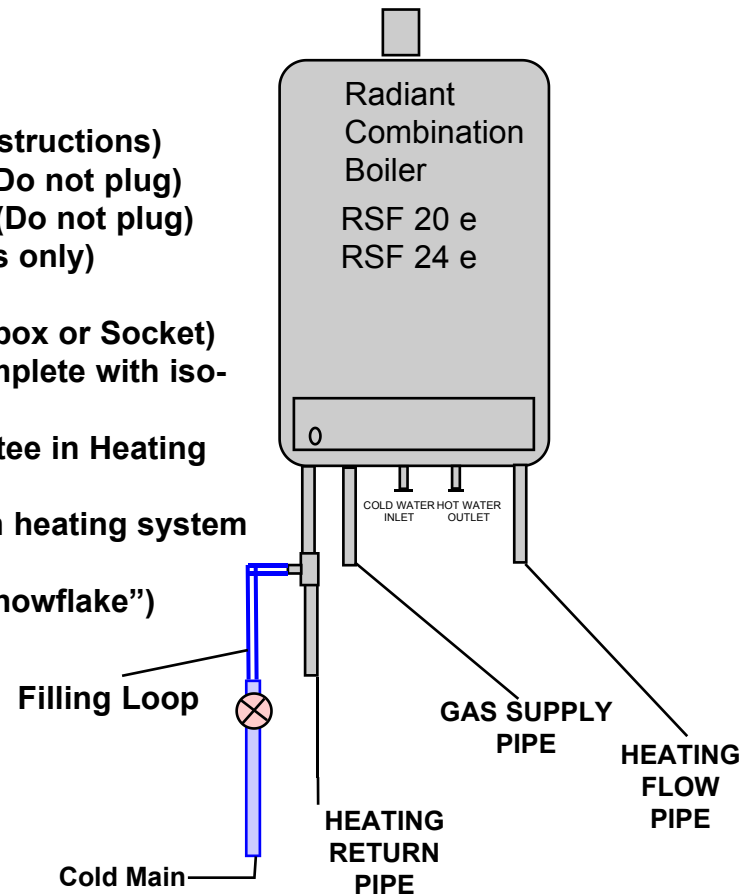

RADIANT TECHNICAL HELP LINE 01329 - 828555