

FACT FILE 040

RADIANT COMFORT USERS INSTRUCTIONS

Users Instructions for RADIANT RSF Gas boilers

1. Ensure the indicator lights no's 15 & 16 are lit (these are the pressure of the water in the boiler, indicators)
2. Switch No. 1 is in winter position **Snow Flake** (your heating temperature may be controlled by your room thermostat)
3. Timer No. 5 is set to auto position or 24 hours
4. Temperature of Hot water is controlled by switch no. 4
5. Temperature of heating is controlled by switch no. 3
6. The temperature of the water in the boiler is noted by the indicators lights marked 30 - 80 degrees this is for both heating and hot water use
7. Should the lights on the front of control panel flicker on and off, this indicates the pressure in the system is low and in need of charging up, to recharge system, locate filling loop (braided hose below boiler) turn the valve with black top on and check that both the 1 (15) & 1.5 (16) indicator lights are lit, make one further check of pressure gauge (located under the bottom of boiler through panel aperture) then turn off the valve.

RSF 20-24 SLIM RADIANT BOILERS

**For more information call
The Technical Help Line
012329 - 828555**

